




Instruções de montagem K2097

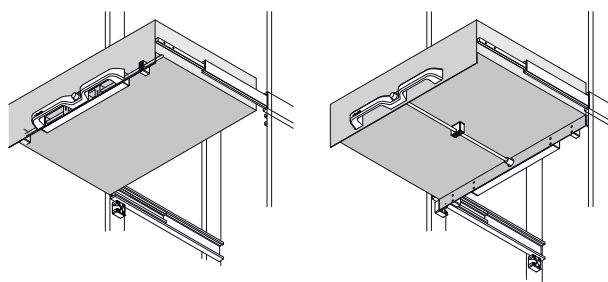


K2097.060
K2097.120

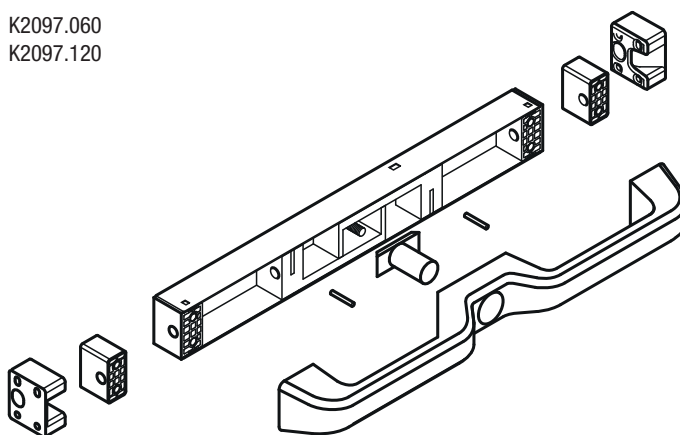


K2097.91

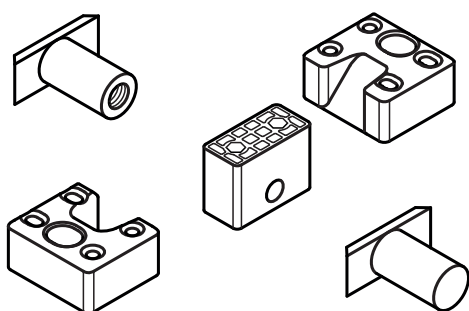


K2097.900500
K2097.900750
K2097.910500
K2097.910750

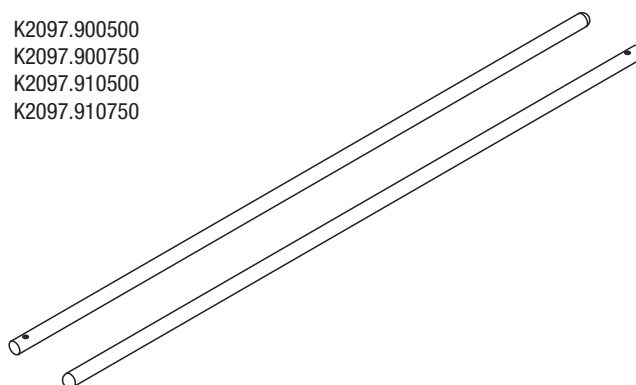

K2097.60 + K2097.900500 ou K2097.910500
K2097.120 + K2097.900750 ou K2097.910750

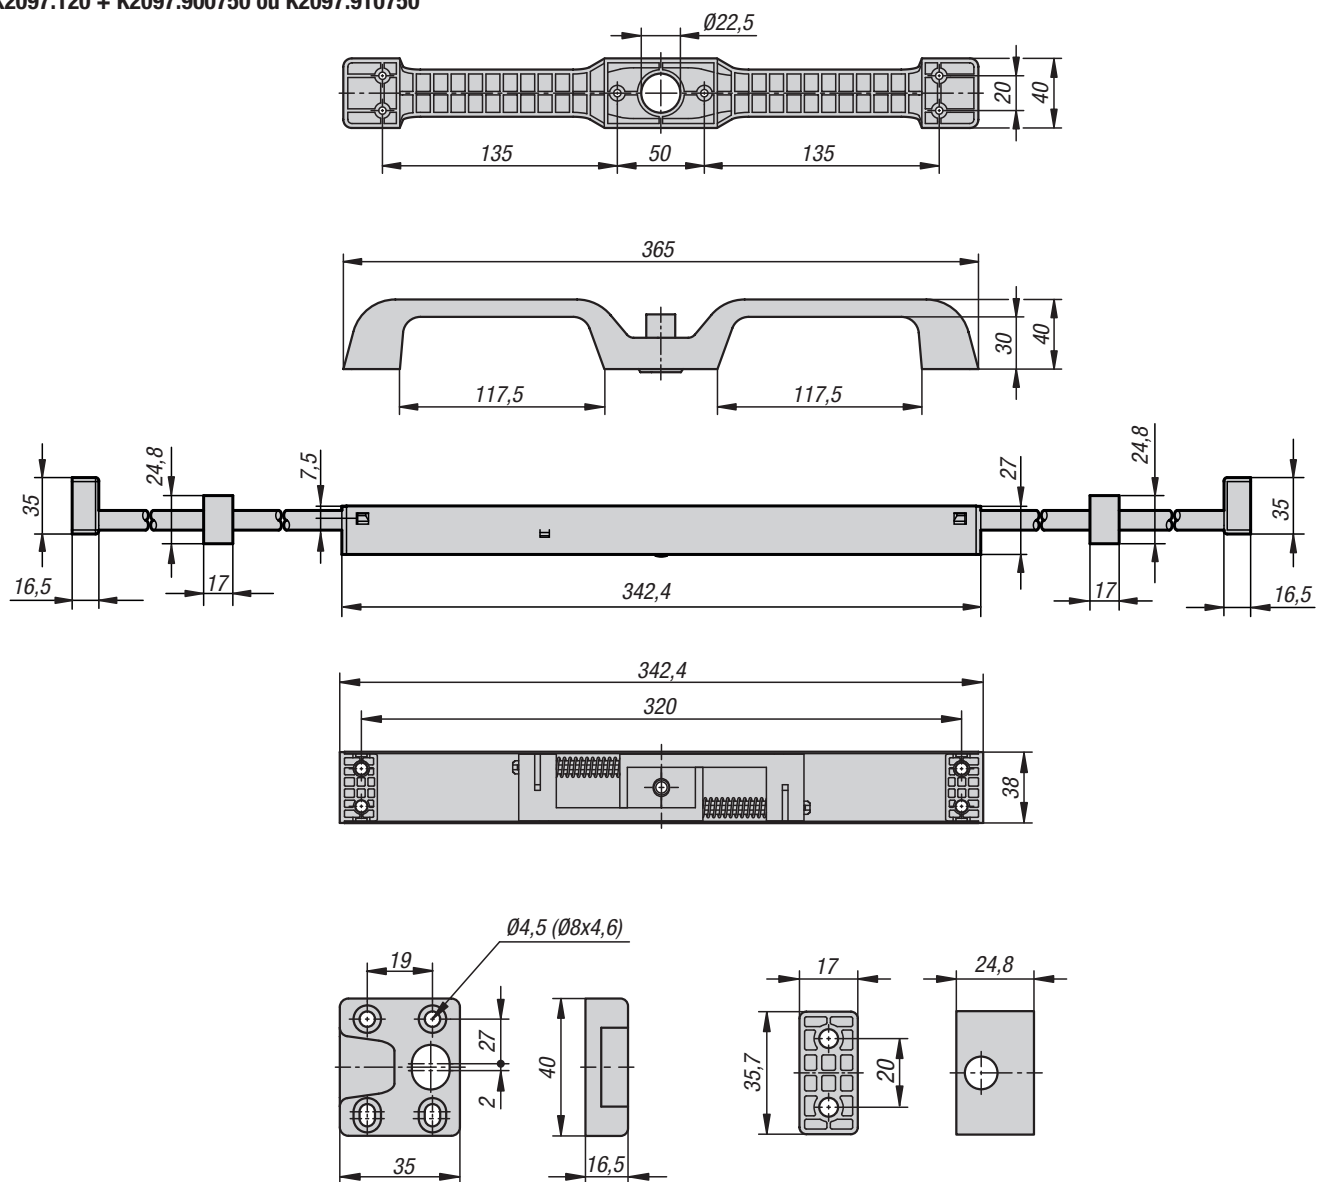


K2097.60 + K2097.900500
ou K2097.910500 + K2097.91
K2097.120 + K2097.900750
ou K2097.910750



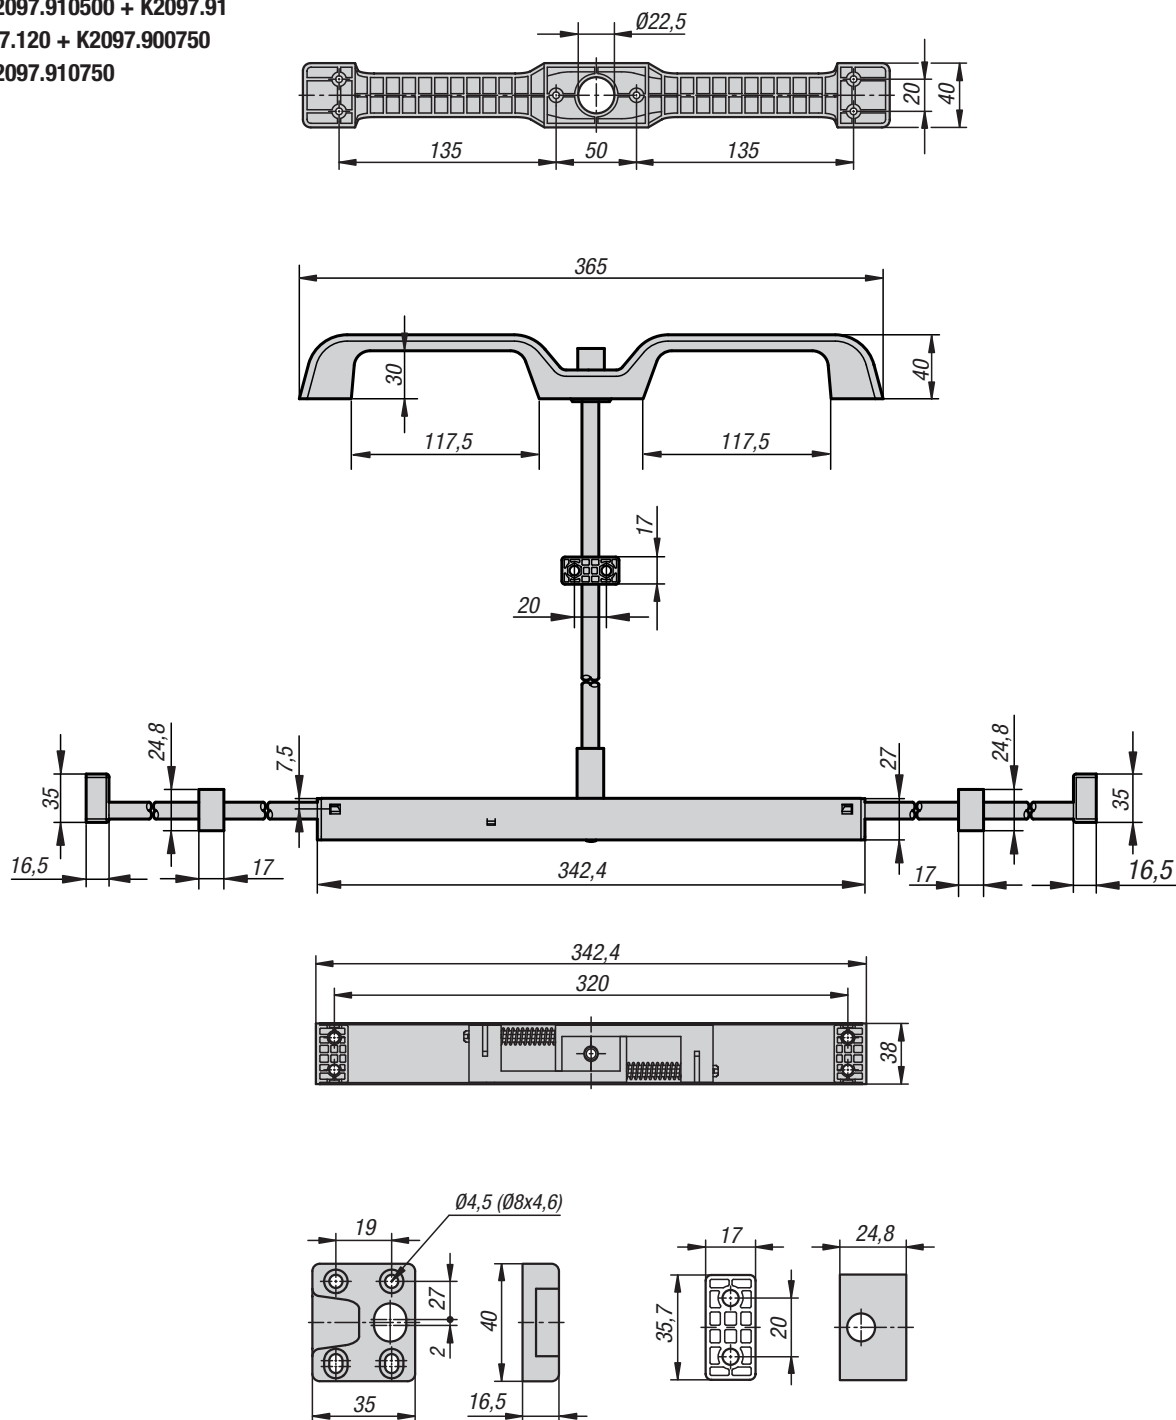




Retenção e bloqueio



O bloqueio na posição aberta não pode ser utilizado para trilhos de extensão excedente (mais de 100% de extensão).

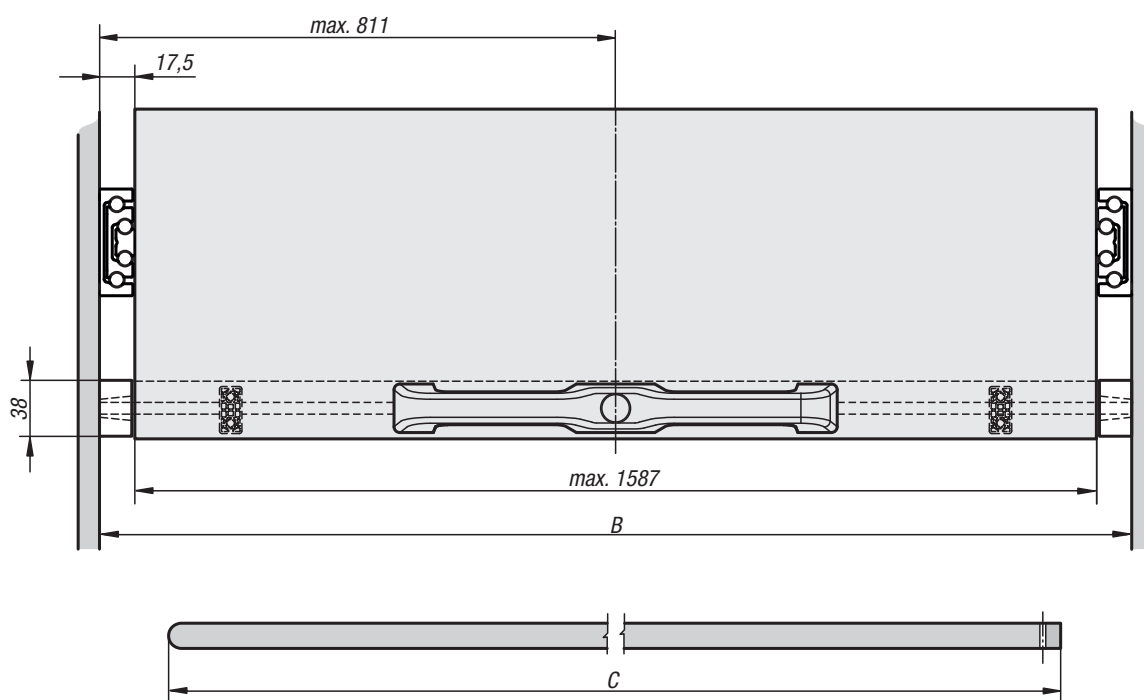

 $C = (B - 122,3) / 2$
 $C < 500$
 $C > 500$

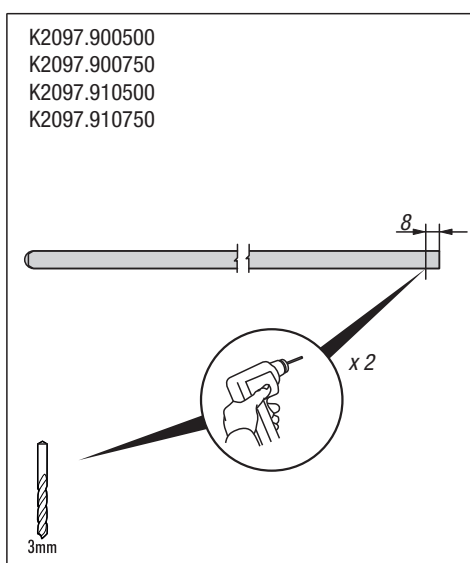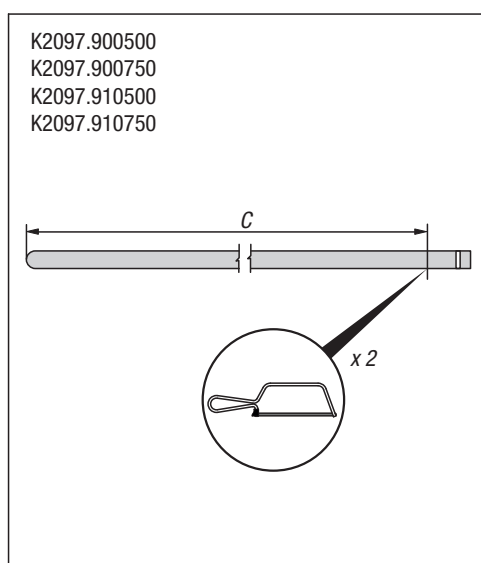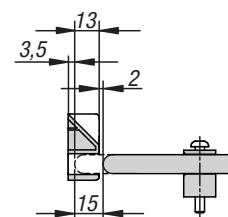

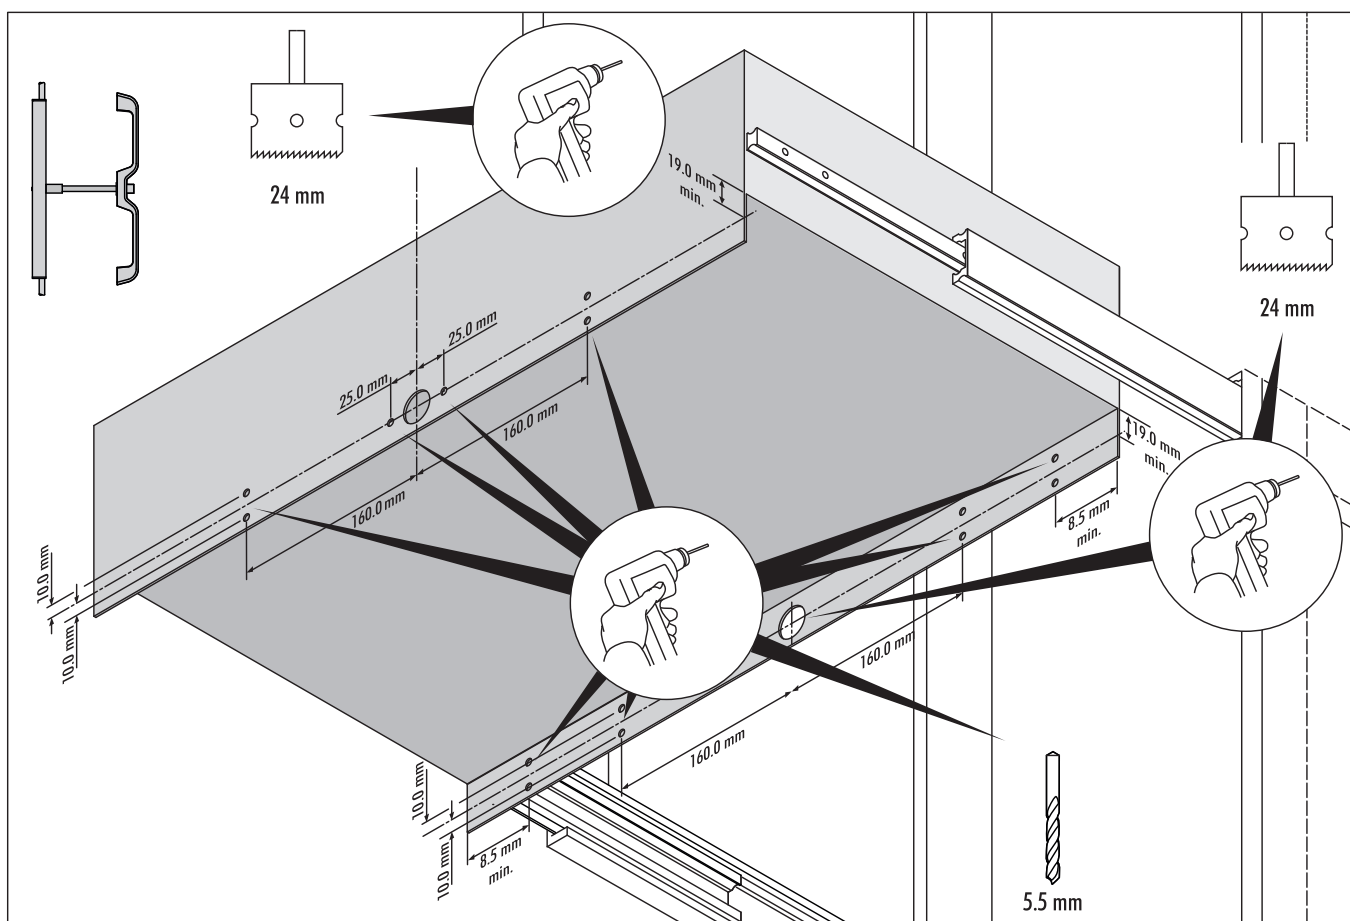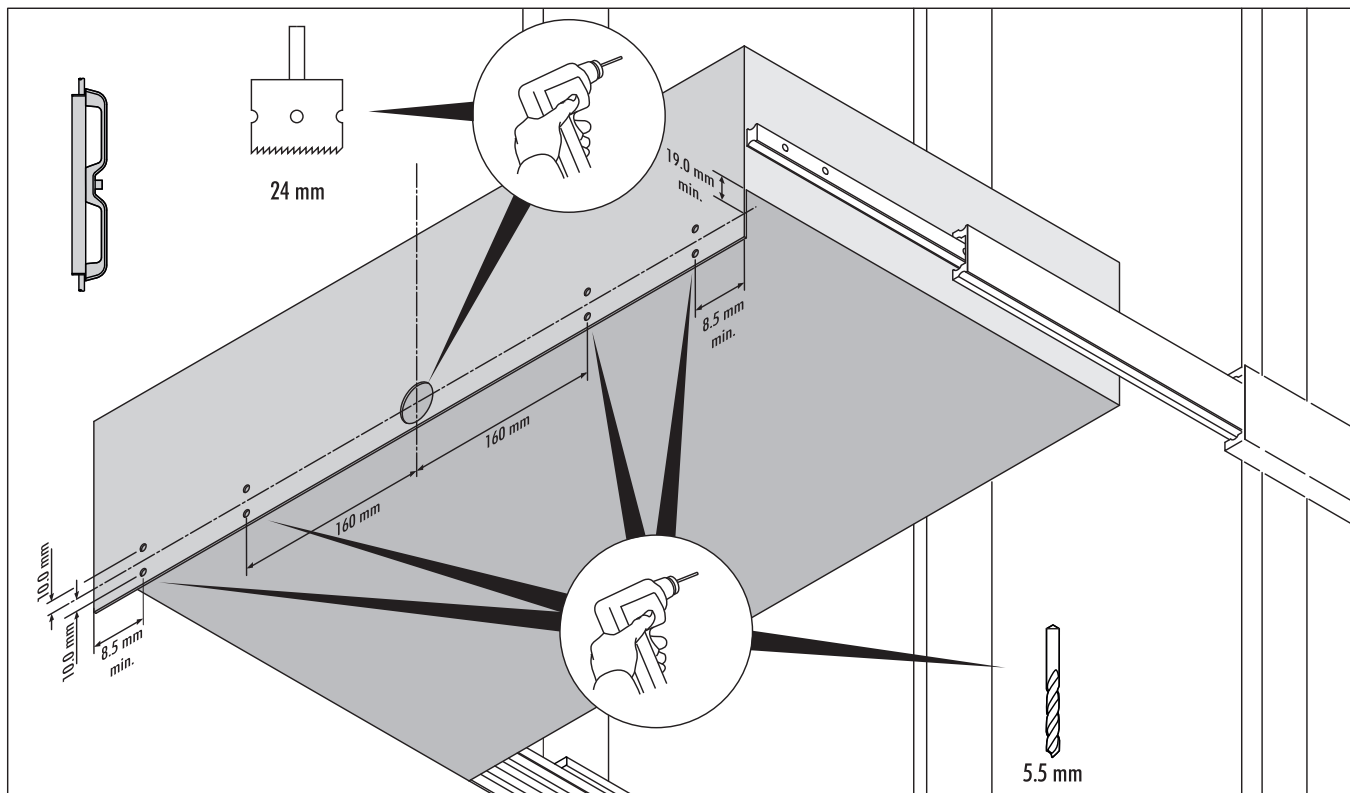

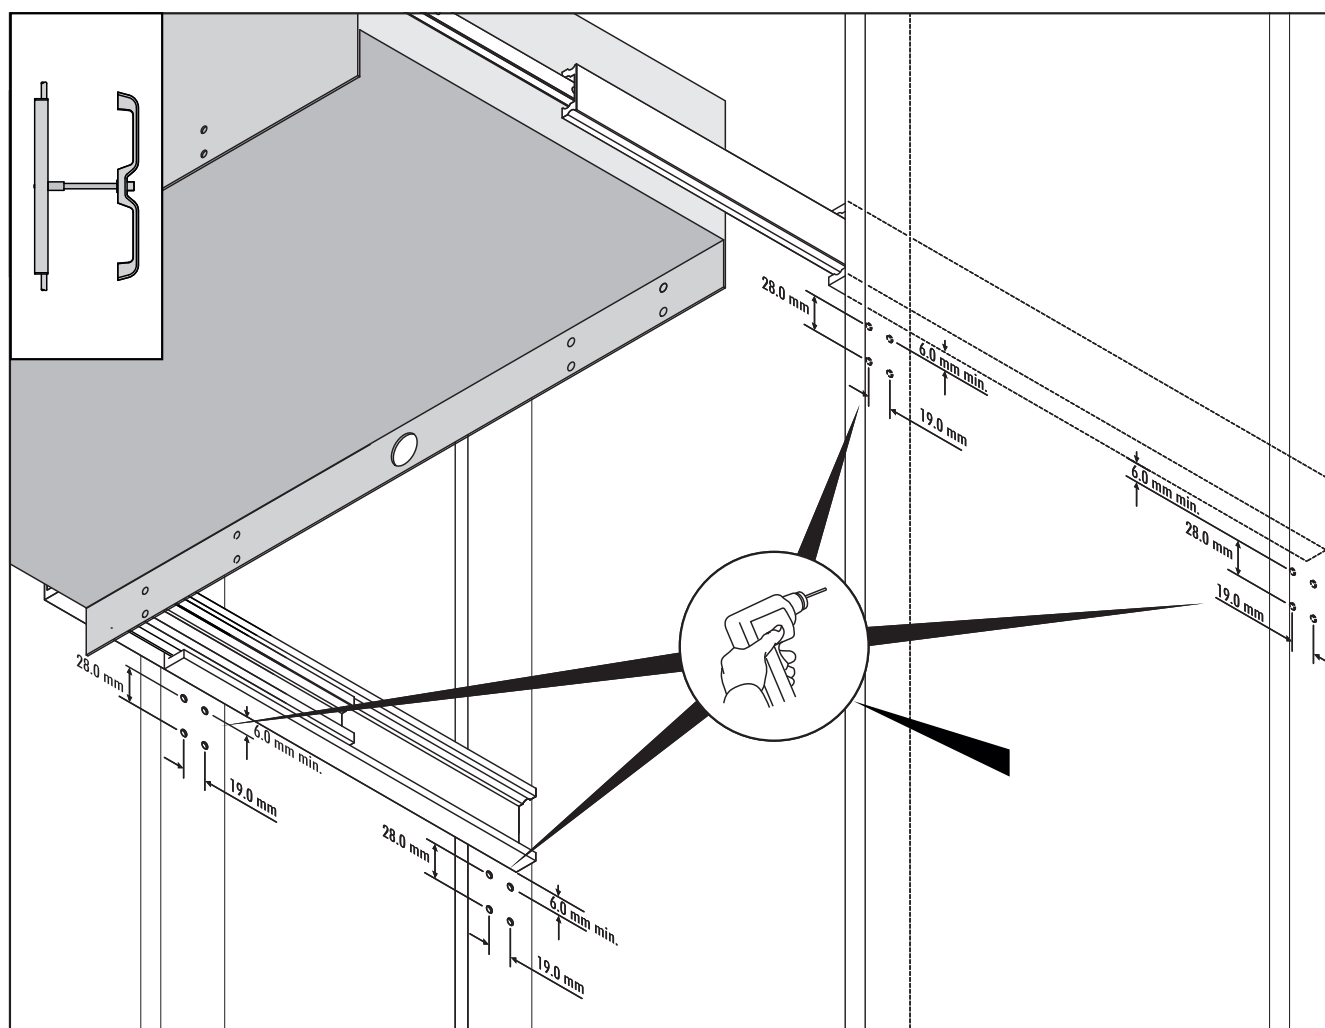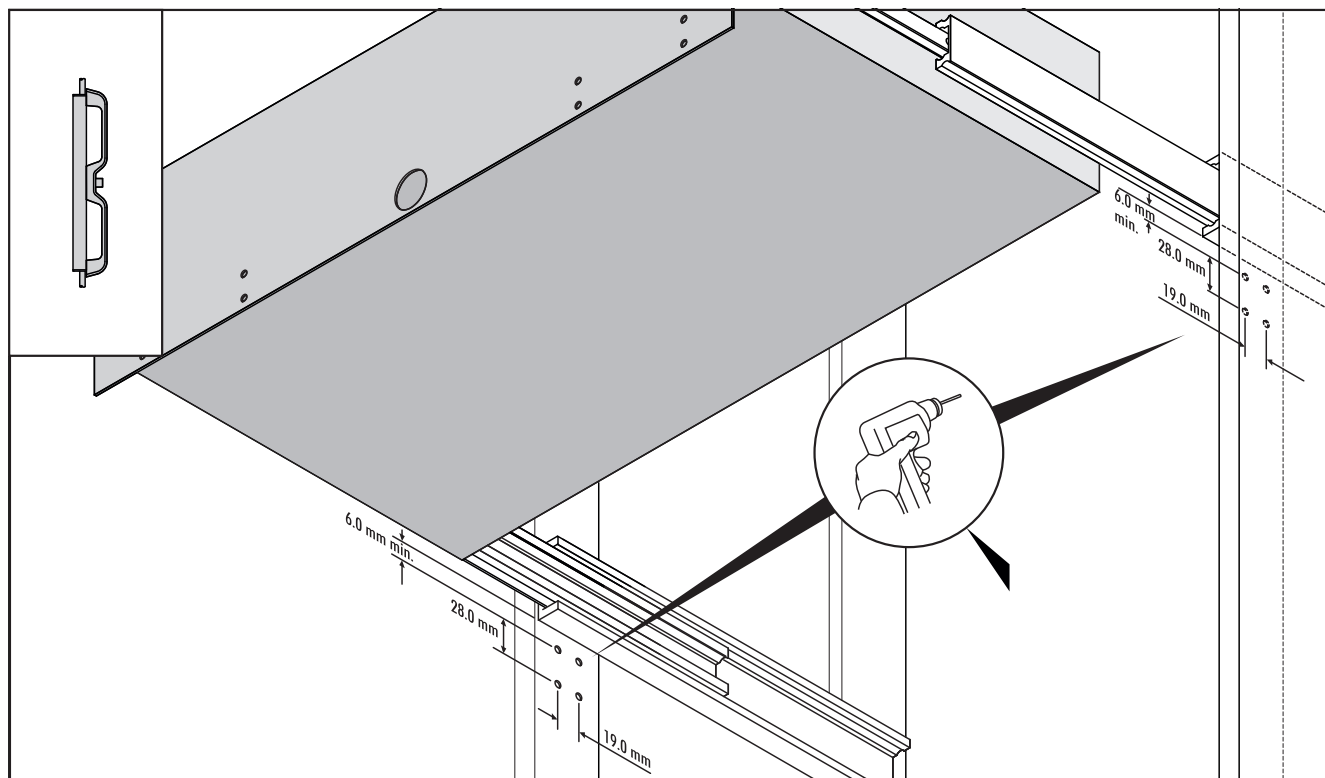

Perfuração e fixação adequadas à situação

